


Perforated Curved Front Door for NetShelter™ SX Advanced Cabinets AR70XXAB2 Models

Inventory

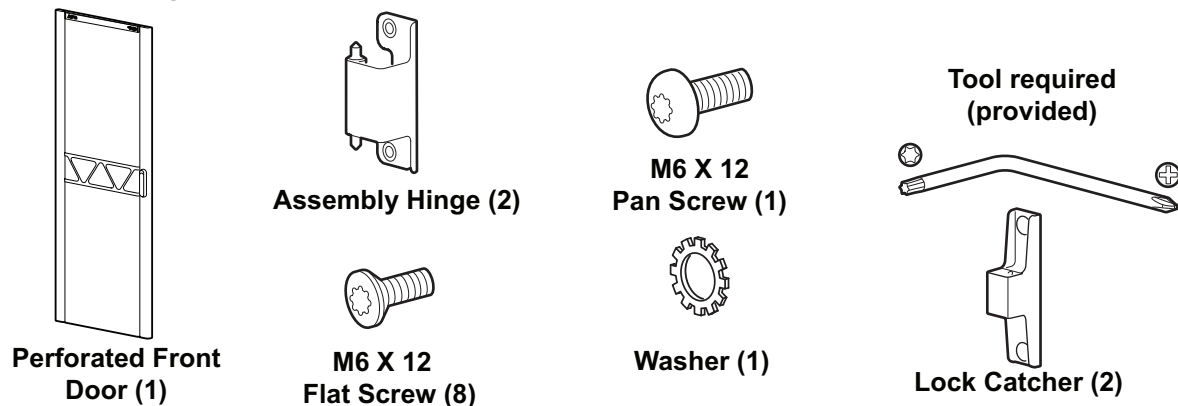


Installation


NOTE: The door can be installed on either the left or right side.

NOTE: Smaller cabinets may look different than the illustration.

Install the door

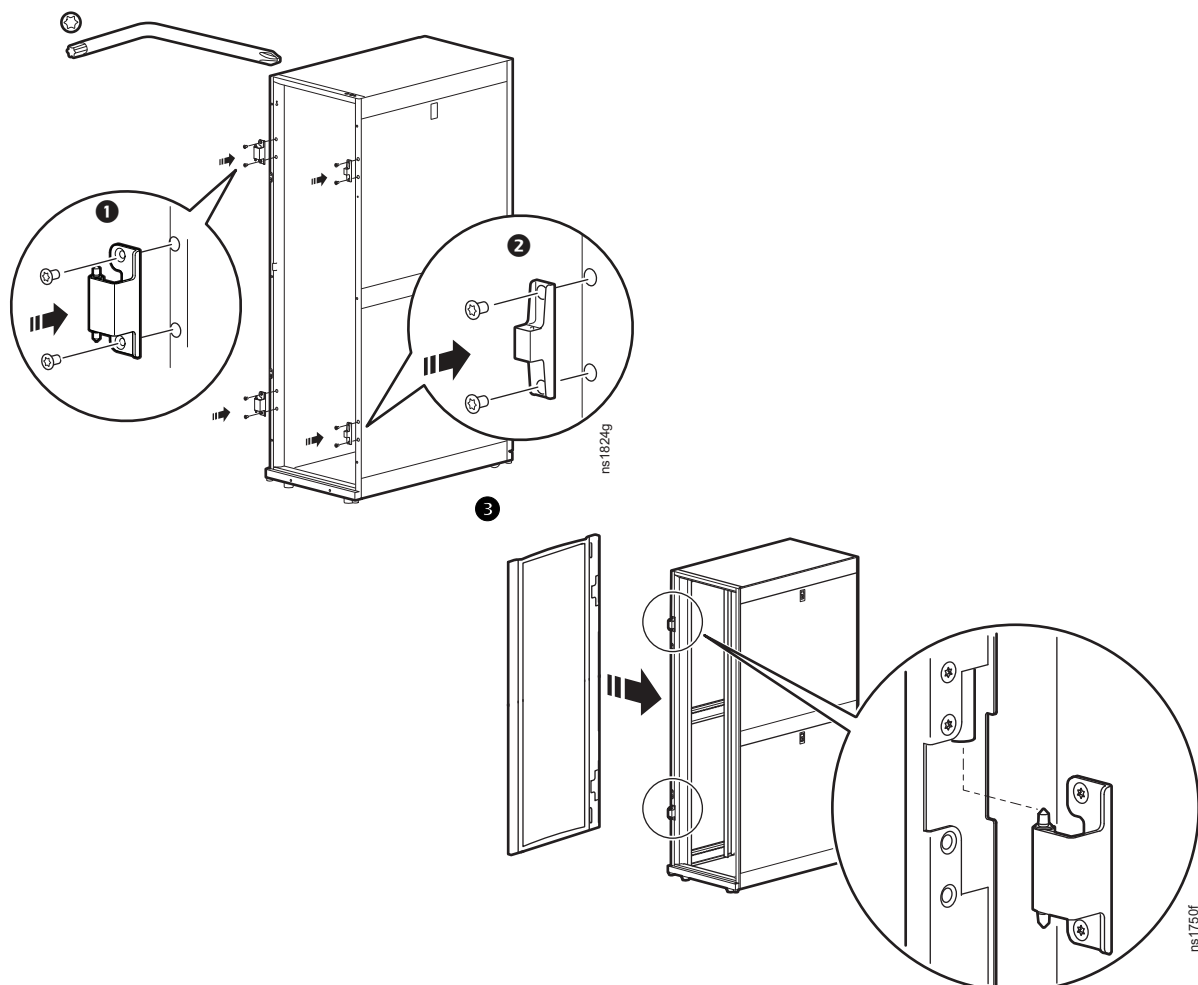


4

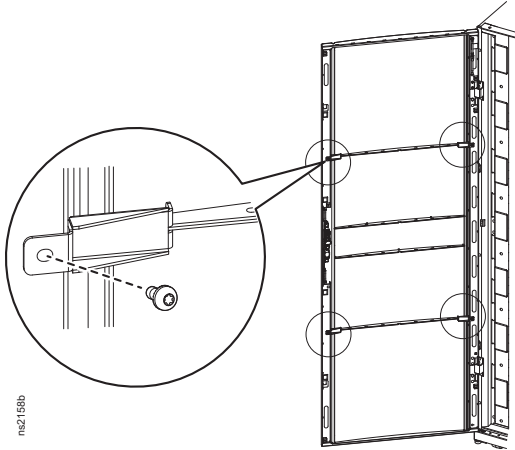

You can remove the door transportation stiffeners after unpacking the cabinet.


NOTE: The illustration shows the front door with a section view of the interior cabinet.

5

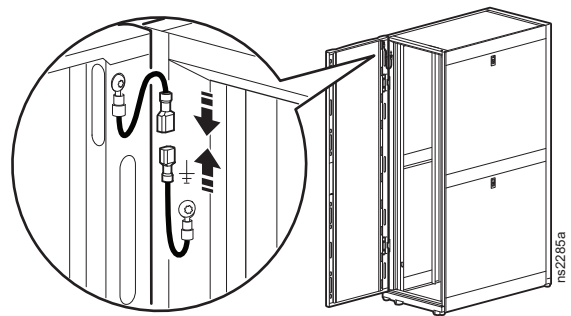


Reverse the door

1

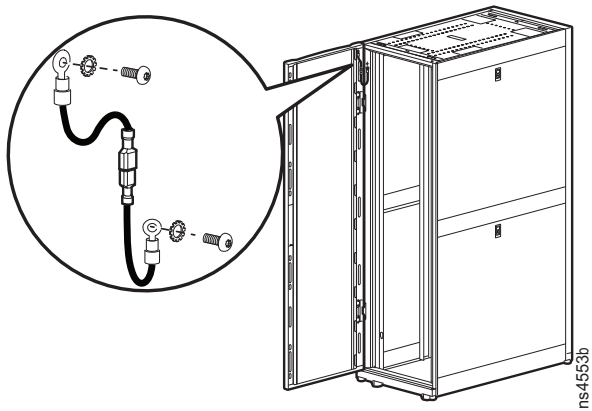


2

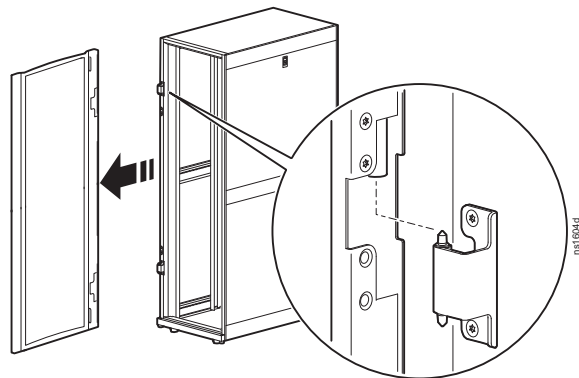


3




4

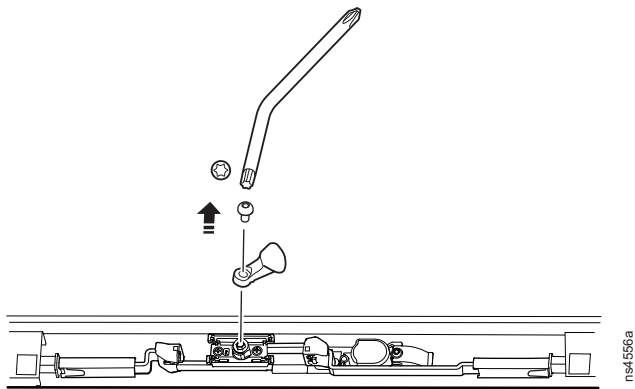


5

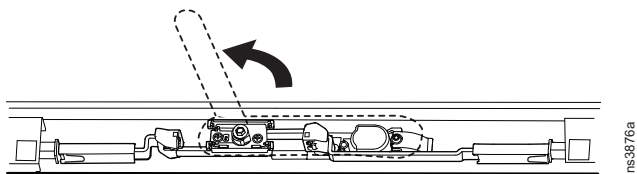


6

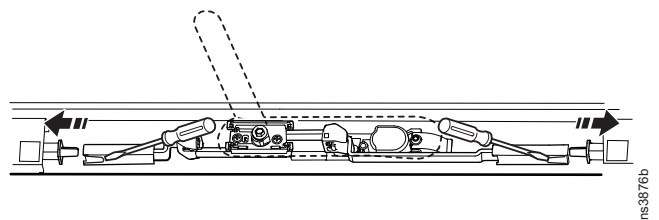


7

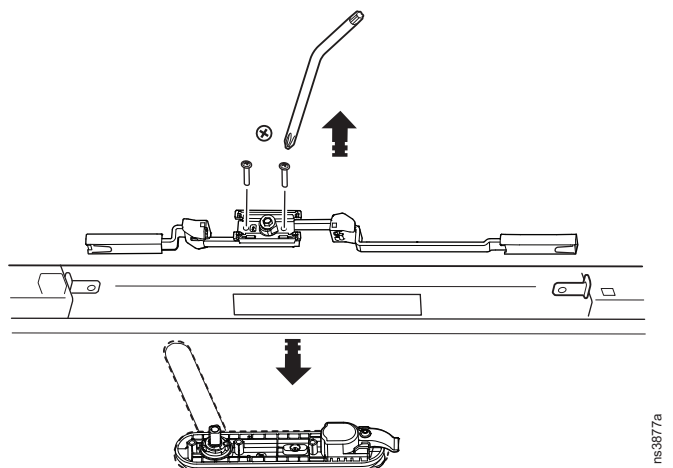


8




9

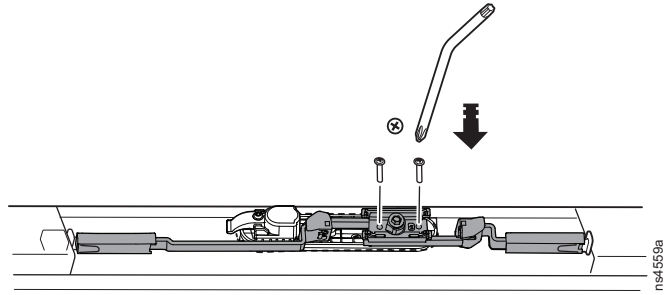


10

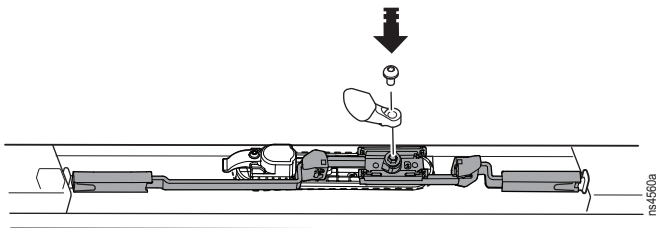


11

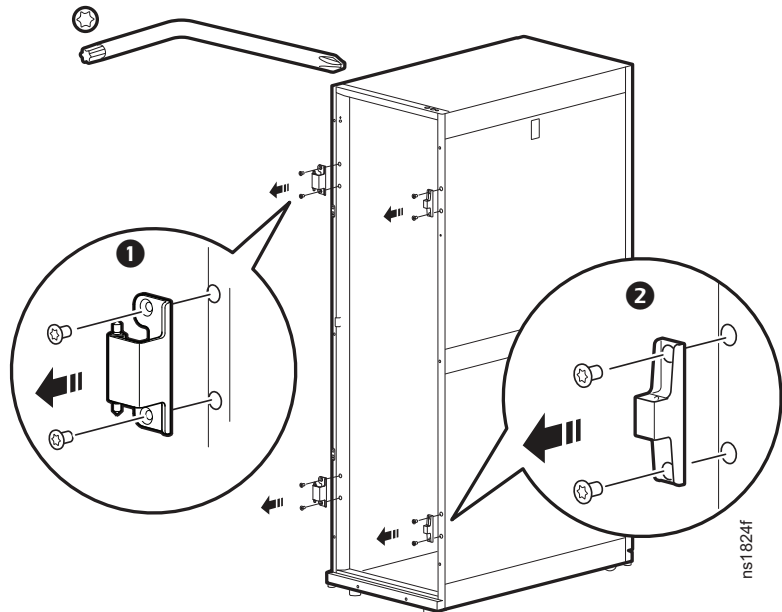


12

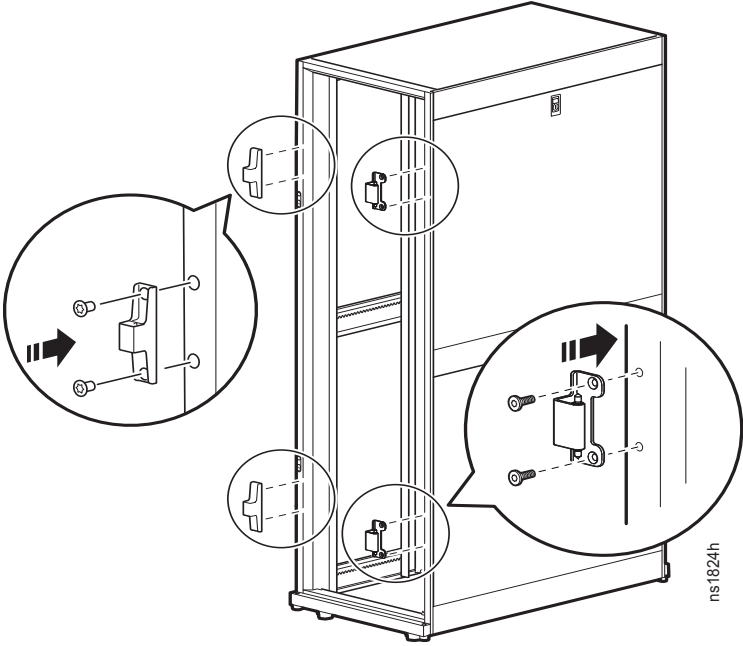


13

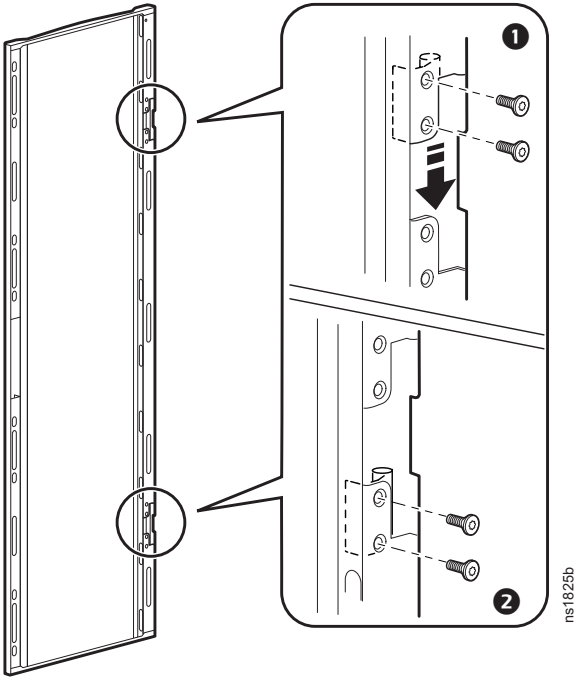


14

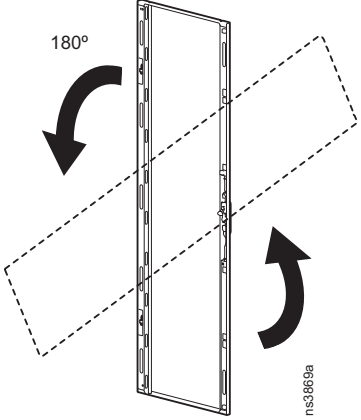

15

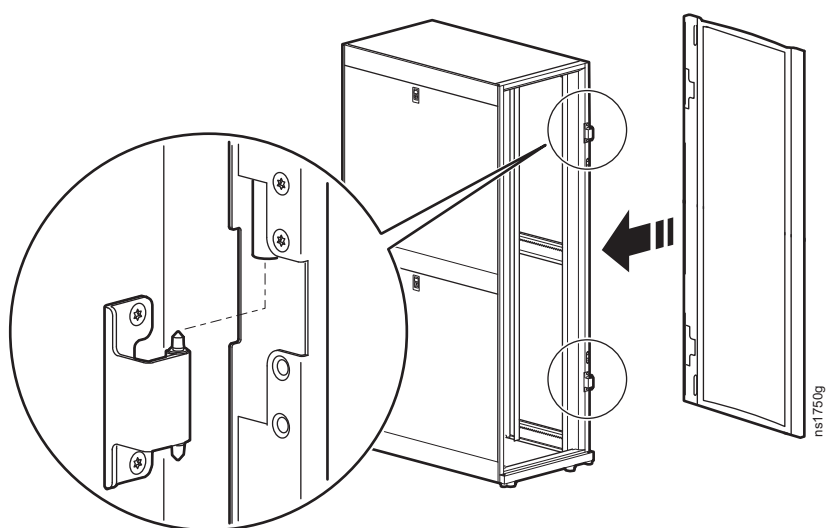

16

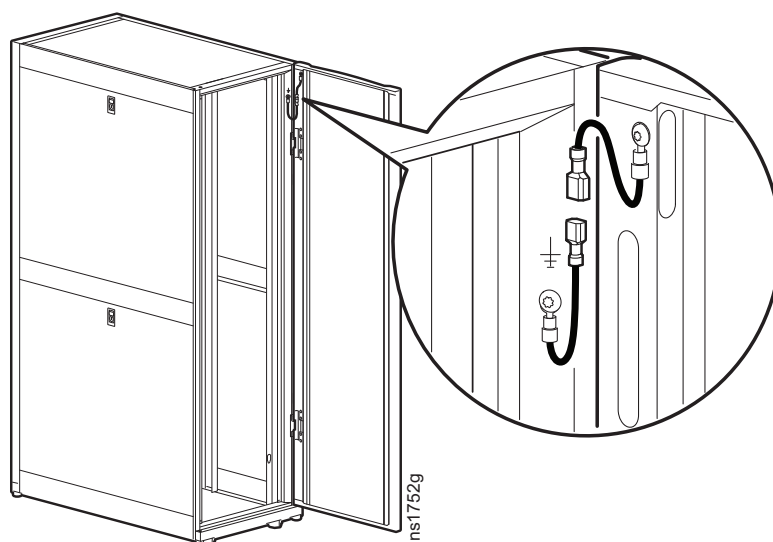

17

